

Haldex Multi Adjustable Automatic Slack Adjuster Puller

10410

**TIGER
TOOL**

Have What It Takes

Safety Warning

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

- **Stay Alert!** Watch what you are doing and use common sense when operating this tool.
- Inspect product for damage prior to using; do not use if product is in unsafe condition.
- Do not operate tool while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area.
- Do not overreach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep hands clear of all pressurized hydraulic components.
- Always ensure hoses are free from sharp bends and kinks.
- Keep your work area clean and well lit.



View demonstration videos and a complete product list at [tigertool.com](https://www.tigertool.com)

Technical Support
1.800.661.4661

Haldex Multi Adjustable Automatic Slack Adjuster Puller

10410

**TIGER
TOOL**

Have What It Takes

Operating Instructions

Threads must be clean and well lubricated at all times.
Do not use over a ½" impact wrench—doing so will void warranty.

- 1 Remove clevis pin from the end of the slack adjuster with the Tiger Tool 10501 Brake Clevis Pin Press. Remove the slack adjuster rod from the slack adjuster with the Tiger Tool 10502 Slack Adjuster Rod Pin Press.
- 2 Select the bent or straight arm and attach to the main puller body with the ½" x 1" bolt supplied. Do not tighten at this time. **Note:** straight arm is for older style Haldex slacks. The bent arm is for newer angled and/or offset Haldex slack adjusters.
- 3 Back out the forcing screw, slip the puller onto the slack adjuster. Align the tip of the forcing screw with the center of the s-cam.
- 4 Secure the selected arm to the slack adjuster through the clevis hole using supplied ½" x 2 ½" hardware.
- 5 Tighten ½" x 1" and ½" x 2 ½" bolts to securely mount the puller to the slack adjuster.
- 6 Turn the forcing screw by hand or with an impact wrench.
- 7 Hold the puller and slack adjuster to keep it from falling to the ground.

Here at Tiger Tool, your satisfaction is our number one priority. Should you have any questions about this or any of our products, please call us at 1.800.661.4661.



View demonstration videos and a complete product list at [tigertool.com](https://www.tigertool.com)

Technical Support
1.800.661.4661


Haldex Multi Adjustable Automatic Slack Adjuster Puller

10410

**TIGER
TOOL**

Have What It Takes

Parts Breakdown

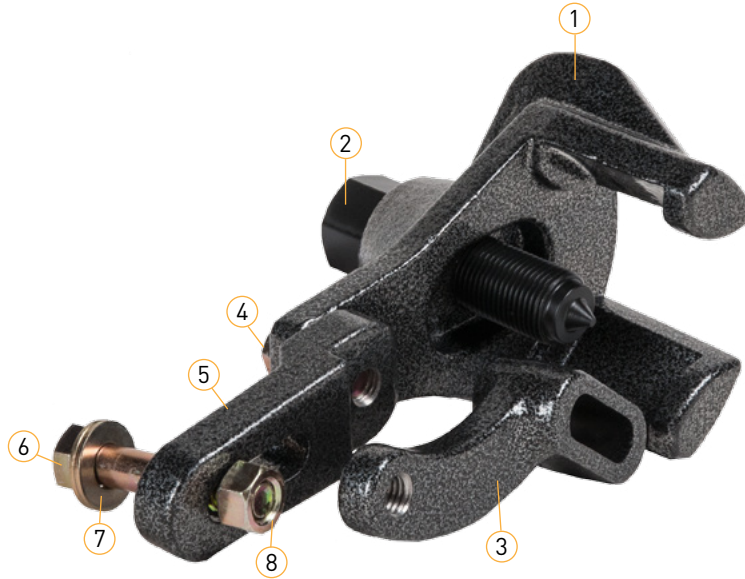

Item No.	Part Number	Description	Qty.
1	10410-1	Body	1
2	10407-2	Forcing Screw	1
3	10410-3	Bent Arm	1
4	10410-4	Bolt	1
5	10410-2	Straight Arm	1
6	10409-2	Bolt	1
7	10407-4	Washer	1
8	10407-5	Nut	1



View demonstration videos and a complete product list at [tigertool.com](https://www.tigertool.com)

Technical Support
1.800.661.4661