




Striker 4-Pin to Hardwire Conversion


Follow these steps:




- 1 Remove the screw from the transmitter housing.

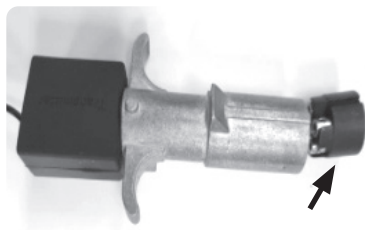

- 2 With needle-nose pliers, remove the insert.

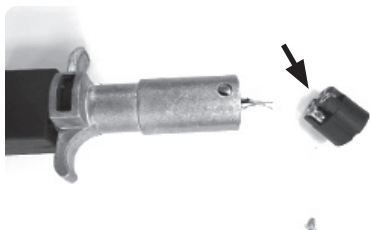

- 3 Loosen the 3 set screws with a 1.5 mm Allen wrench.

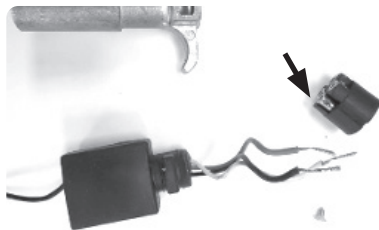

- 4 Bend rubber portion of the transmitter away from the locking tab on the housing.

- 5 Connect the following wires for signal functionality.
Red-Right Turn/ **Yellow**-Left Turn/ **Black**-Ground