

# Jack Stands with Pin



Models: GJS3T, GJS6T

## INTENDED USE:

GUNI Jacks Stands are to be used in identical pairs for supporting one end of a vehicle at a predetermined height.

## SPECIFICATIONS:

	GJS3T	GJS6T
Capacity (in.):	3	6
Min. Lift Height (in.):	11-13/16	15-1/2
Max. Lift Height (in.):	17 1/8	23 7/16
Net Weight (lb.):	15	31.7

## WARNING

- Study, understand, and follow all instructions before using these stands.
- Use only as an identical pair.
- Maximum load capacity per identical pair shall not exceed the rated capacity of the individual stand.
- Use stands to support one end of a vehicle only.
- Use only on a hard, level surface capable of supporting the load.
- Center load on saddle.
- Position jack stand saddles at vehicle manufacturer's designated support points.
- Never crawl under a vehicle when positioning or removing jack stands.
- No alterations or modifications shall be made to these stands.
- Failure to heed these warnings may result in personal injury and/or property damage.
- Cancer and Reproductive Harm [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## ADDITIONAL SAFETY PRECAUTIONS

- Instructions, warnings, and safety information should be presented in the operator's native language before using these stands.
- Maintain a safe working environment. Keep work area clean and well lit.
- Do not use these stands if under the influence of alcohol drugs, or medical prescriptions that will impair judgment or reflexes
- The use of jack stands is subject to certain hazards that cannot be precluded by mechanical means, but only by the exercise of intelligence, care, and common sense. Therefore, users must be careful, competent, trained and qualified in the safe operation of stands when servicing motor vehicles and their components.



## ASSEMBLY INSTRUCTIONS

- Become familiar with all the components of the jack stand by referring to the drawing on page 3.
- Install the column all the way in the base.
- Lay the stand on its side with the stop tab (#6 Parts Diagram) on the base facing up.
- Place a punch on the tongue of the stop tab and hit the punch with a hammer. Do not hit the tongue in too far as to obstruct the movement of the column. The purpose of the stop tab is to prevent the column from being removed from the base.

## OPERATING INSTRUCTIONS

### JACK STAND USE - NEVER CRAWL UNDER A VEHICLE WHEN POSITIONING OR REMOVING STANDS!

1. Shut off vehicle engine and put transmission in PARK or gear. Activate the vehicle's emergency brake and exit the vehicle. Chock tires that will not be lifted off the ground. There should be no occupants in the vehicle when lifting or supporting the vehicle.
2. Since stands are to be used in a matched pair to support only one end of a vehicle, raise the front or rear end of the vehicle at the vehicle manufacturer's suggested lift points. Lift the vehicle a little higher than the desired work height.
3. Make sure the stand columns are all the way down and the column locking bar and chain are not installed. Immediately position the jack stands at the manufacturer's designated support points under the vehicle's frame.
4. Starting on one side of the vehicle, extend the stand's column as high as it will go to get as close to the vehicle's designated support point as possible. Make sure the stand's column

# Jack Stands with Pin



**Models:** GJS3T, GJS6T

saddle will make sufficient contact with the vehicle's frame and the frame is centered on the saddle when the vehicle is lowered onto the saddle. Reposition the stand if necessary and install the column locking pin and chain in the top of the stand's base.

- Duplicate step 4 with the other jack stand.
- Very slowly lower the vehicle onto the stands so the stand saddles are making secure contact with the vehicle frame. Do not shock load. If the setup seems unstable or the stand saddles are not making secure contact with the frame, lift the vehicle just high enough to clear the stands and reposition the stands accordingly.
- Once the stands are adequately supporting the vehicle, removed the lifting device from underneath the vehicle.

## JACK STAND REMOVAL

- Repeat Step 1 under Jack Stand Use.
- Raise vehicle high enough to clear both jack stand column saddles.
- Remove the column locking bars and chain from the top of the stand bases and lower the columns all the way down. Remove the stands from underneath the vehicle and slowly lower the vehicle to the ground.

## MAINTENANCE

- Stand owners are responsible for maintenance and upkeep.
- Users shall inspect the stands before each use to make sure there are no cracked welds/castings, damaged, deformed or excessively worn components. Make appropriate repairs or replacements before using.
- Make sure there is no rust, corrosion or deformation that is preventing the column for freely engaging the column teeth and the column locking bar from being engaged or disengaged. Make corrections before using.
- Do not apply grease or lubrication to any portion of these stands.
- Keep product labels readable.

## 1-YEAR LIMITED WARRANTY

GUNI warrants that GUNI branded products are free from defects in workmanship and materials. We will repair or replace products that fail to give satisfactory service due to workmanship or materials.

The warranty for GUNI branded products is ONE YEAR from the date of the original purchase. The proof of purchase must be available for any warranty consideration. Repair or replacement shall be at the sole direction of GUNI.

GUNI warranty is administered where the original purchase was made. GUNI will not provide any warranty for any product subjected to misuse, modification, unreasonable use, neglect, lack of maintenance or use after the unit is significantly worn.

## CONTACT US

Phone: 800-381-1029  
guniproducs.com/warranty

## PARTS LIST AND DIAGRAM

Index #	Description	Qty.
1	Column	2
2	Locking Pin with Chain	2
3	Base	2
4	Ratchet Pawl	2
5	Handle	2
6	Stop Tab	1

