

WHELEN[®]

ENGINEERING COMPANY INC.


51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504

Installation Guide: Universal Mount for Strip-Lite™ PLUS

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Customer Service e-mail: custserv@whelen.com

Mounting:

1. Position the "L" bracket against the mounting surface. **Note: Be sure no vehicle components or equipment will be damaged or compromised by the installation of this product.** Using the bracket as a template, mark the location for 3 mounting holes.
2. Drill a clearance hole sized for a #8 sheet metal screw at the mounting hole locations.
3. Secure the Bezel, light and gasket to the mounting bracket as shown, route the Strip Lite wires through the bracket and extend them to your power source.
WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry the load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!
4. Refer to the instructions included with your Strip Lite for wiring, fusing and operating information.

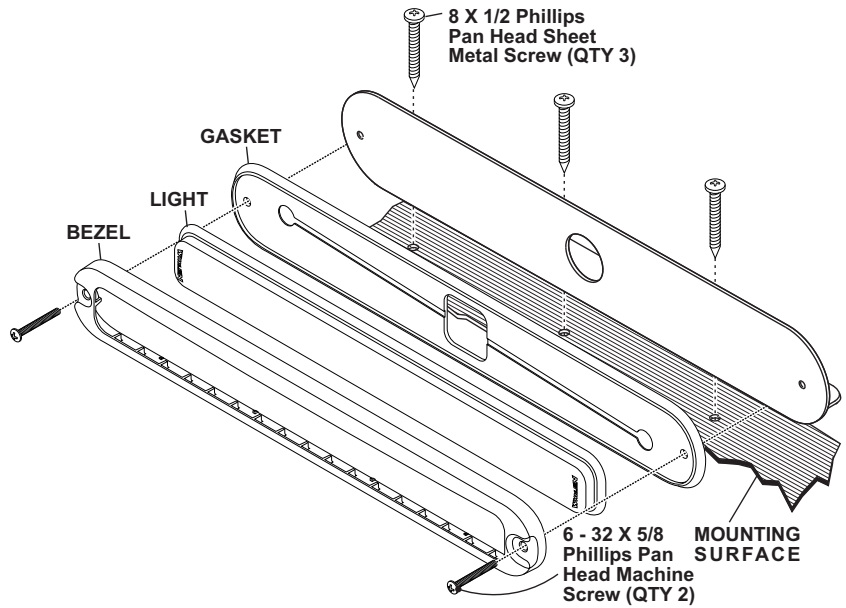

©2019 Whelen Engineering Company Inc.
Form No.14C41 (022519)

For warranty information regarding this product, visit www.whelen.com/warranty

WHELEN[®]

ENGINEERING COMPANY INC.


51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504

Installation Guide: Universal Mount for Strip-Lite™ PLUS

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Customer Service e-mail: custserv@whelen.com

Mounting:

1. Position the "L" bracket against the mounting surface. **Note: Be sure no vehicle components or equipment will be damaged or compromised by the installation of this product.** Using the bracket as a template, mark the location for 3 mounting holes.
2. Drill a clearance hole sized for a #8 sheet metal screw at the mounting hole locations.
3. Secure the Bezel, light and gasket to the mounting bracket as shown, route the Strip Lite wires through the bracket and extend them to your power source.
WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry the load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!
4. Refer to the instructions included with your Strip Lite for wiring, fusing and operating information.

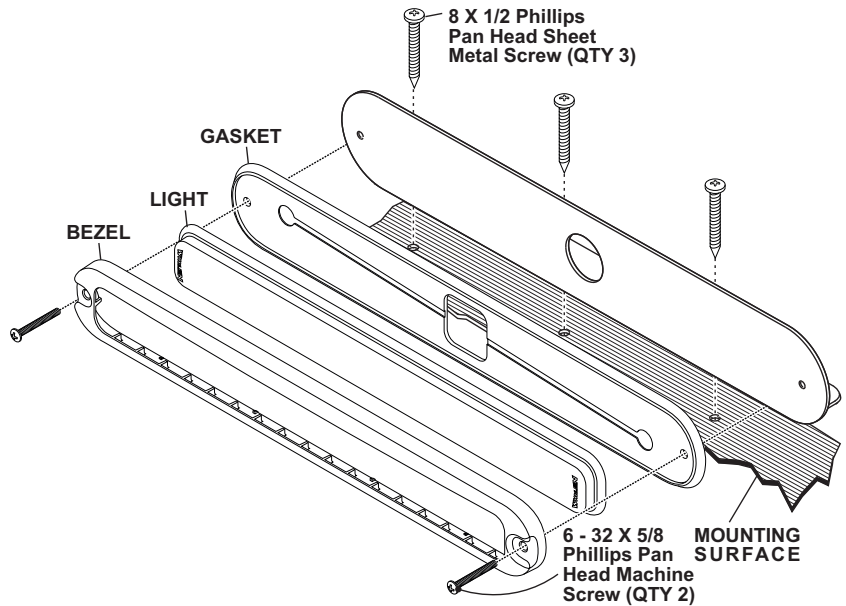

©2019 Whelen Engineering Company Inc.
Form No.14C41 (022519)

For warranty information regarding this product, visit www.whelen.com/warranty