



Allegiant Wire Guide

WIRE COLOR FUNCTION

- RedLightbar Current (Wire to Ignition w/ Relay)
- BrownMode 1
- OrangeMode 2
- YellowMode 3
- BlueWorklight/Bedlight
- GreenSignal Master Left
- GraySignal Master Right
- Green/GrayCenter Out
- Brown/WhiteDim/Pattern Change
- BlackGround

MODE DEFINITION

- Mode 1Activates only red LED heads
- Mode 2Activates only white LED heads
- Mode 3.....Activates only amber LED heads

If all modes are active, all color LED heads will be active.

Tap dim 5 times to +12 to unlock PAT change

3-Wire Cord

WIRE COLOR FUNCTION

- Red.....Left Turn
- Black.....Tail
- Green.....Right Turn