

# **SnowDogg® Snowplow Repair Connectors**

## INSTALLATION INSTRUCTIONS

### 16160112

1. Remove the existing connector by cleanly cutting the harness before the damaged area.
2. Strip the wires on the existing harness.
3. Properly crimp the wires using the butt connectors preinstalled on the repair harness
  - *It is recommended that tape or heat shrink tubing be installed to prevent corrosion.*
  - *Match wire colors to ensure proper function.*
4. Verify proper function of the replaced connector.

**NOTE:** The gray wire is only used on the short lead from the relay module. If it is not being used, tape it off.