

SnowDogg® Snowplow Repair Connectors

INSTALLATION INSTRUCTIONS

16160310

16160110

- 1.** Remove the existing connector by cleanly cutting the harness before the damaged area.
- 2.** Strip the wires on the existing harness.
- 3.** Properly crimp the wires using the butt connectors preinstalled on the repair harness
 - *It is recommended that tape or heat shrink tubing be installed to prevent corrosion.*
 - *Match wire colors to ensure proper function.*
- 4.** Verify proper function of the replaced connector and clean and grease all pins and connection points.