
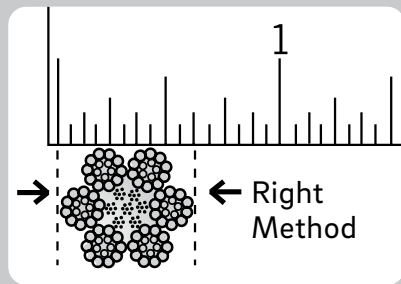


# Before you order.

Avoid disappointment and down time by ordering the right rope the first time. Here's how:

1. Order the wire rope size suggested by your winch maker. It's either in your winch owner's manual or on the winch identification plate.
  - Light-duty tow trucks typically use  $\frac{3}{8}$ " rope.
  - Medium-duty tow trucks typically use  $\frac{7}{16}$ ",  $\frac{1}{2}$ " or  $\frac{9}{16}$ " rope.
  - Heavy-duty tow trucks typically use  $\frac{5}{8}$ " rope.
2. Measure your rope as shown in the diagram or slip a socket wrench over the plain end for a fast, accurate measurement.

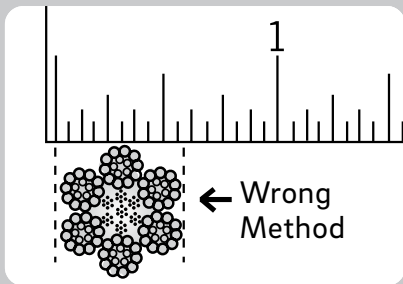

\*Measure the distance between the outside edges of two opposite bundles, not the distance between the flat sides.