

Warranty Information

If the need should arise, warranty procedure is outlined on the back of your self-addressed, postage paid warranty card. Please read and fill out the enclosed warranty card and send it to Ramsey Winch Company. If you have any problems with your wireless remote, please follow instructions for prompt service on all warranty claims.

Limited Lifetime Warranty

Ramsey Winch offers a limited lifetime warranty for each new Ramsey wireless remote against manufacturing defects in workmanship and materials on all manufactured components.

The wireless remote carries a limited 1-year warranty.

The obligation under this warranty, statutory or otherwise, is limited to the replacement or repair at the manufacturer's factory, or at a point designated by the manufacturer, of such part as shall appear to the manufacturer, upon inspection of such part, to have been defective in material or workmanship. This Warranty does not obligate Ramsey Winch Company to bear the cost of transportation charges in connection with the replacement or repair of defective parts, nor shall it apply to a product upon which repairs or alterations have been made, unless authorized by the manufacturer, or for equipment misused, neglected, or improperly installed.

Important notice: To the fullest extent permitted by applicable law, the following are hereby excluded and disclaimed: 1. All warranties of fitness for a particular purpose; 2. All warranties of merchantability; 3. All claims for consequential or incidental damages. There are no warranties that extend beyond the description that appears on the face hereof.

Some states do not allow the above exclusions or disclaimers in consumer transactions and as such this disclaimer/exclusion may not apply to your particular case.

To the extent such warranties of fitness for a particular purpose or merchantability are deemed to apply to this product, they exist only for so long as the express limited warranty elsewhere set forth is in existence.

Ramsey Winch Company makes no warranty in respect to accessories, same being subject to the warranties of their respective manufacturers.

Ramsey Winch Company, whose policy is one of continuous product improvement, reserves the right to improve any product through changes in design or materials as it may deem desirable without being obligated to incorporate such changes in products of previous manufacture.

If field service at the request of the buyer is rendered and the fault is found not to be with Ramsey Winch Company's product, the buyer shall pay the time and expense of the field representative. Bills for service, labor or other expenses which have been incurred by the buyer without express approval or authorization by Ramsey Winch Company will not be accepted.

This Warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.



Quality Management System



INSTALLATION AND OPERATING INSTRUCTIONS FOR RAMSEY WIRELESS REMOTE CONTROL FOR THE BADGER WINCH



The following are general installation instructions. Actual installation may vary depending on the Badger application.

Warnings

- 1. WINCH AND WIRELESS REMOTE ARE NOT RECOMMENDED FOR COMMERCIAL/INDUSTRIAL APPLICATIONS. CONSULT RAMSEY FOR SPECIFIC APPLICATIONS.**
- 2. WHEN REELING IN CABLE UNDER NO LOAD, RELEASE THE REMOTE BUTTON WHEN THE HOOK IS A MINIMUM OF 3 FT (1 M) FROM THE WINCH FAIRLEAD. CAREFULLY JOG THE REMOTE CONTROL BUTTON UNTIL THE HOOK IS A MINIMUM OF 1 FT (.3M) FROM THE FAIRLEAD. DISENGAGE THE CLUTCH AND FINISH SPOOLING IN CABLE BY ROTATING THE DRUM BY HAND.**
3. When finished winching, turn transmitter and power to receiver off.
4. Do not pressure wash or steam clean the receiver. This can damage the receiver and adversely affect operation.
5. Refer to winch owner's manual for all winch operating instructions and warnings.

RAMSEY WINCH COMPANY
P.O. BOX 581510 TULSA, OKLAHOMA 74158-1510 USA PHONE: (918) 438-2760 FAX: (918) 438-6688
<http://www.ramsey.com>
OM-914076-1202-E

NOTES

NOTES

Trouble Shooting Guide

Condition	Possible Cause	Correction
Transmitter won't operate	Transmitter is off.	Turn transmitter on (See Testing/Operation) .
	Low transmitter battery voltage.	Replace Battery.
	Transmitter temperature below 0°F (-18°C).	In extremely cold temperatures, keep transmitter in a pocket of innermost layer of clothing when not in use.
Remote receiver will not operate.	Customer-supplied power switch is off.	Turn power switch on.
	Bad ground connection.	Make sure receiver ground wire has good connection to electrical ground.
	Receiver not coded with transmitter.	Program receiver (refer to Programming the Receiver).
Intermittent operation.	External environmental conditions causing intermittent operation in a specific transmitter location.	Wireless remote should not be used in an enclosed building.
	Signal deflecting off of land mass or solid structures.	Keep transmitter in direct line of sight with antenna for optimal operation.
	Transmitter out of operating range.	Stay within 50 ft. of antenna for optimal operation.
	Operating within 50 ft. of any similar device.	Make sure no similar devices are within 50 ft. of vehicle.
	Low battery voltage.	Make sure battery voltage is above 9.5 volts.


Contents

Warnings	1
Parts List	4
Electrical Schematic	5
Before Beginning Installation	6
Installation	6-8
Testing & Operation	9
Troubleshooting Guide	10
Warranty	12

BADGER 2500 WIRELESS REMOTE PARTS LIST


ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	1	282058	WIRELESS RECEIVER & TRANSMITTER KIT
2	1	251251	ANTENNA KIT
3	1	251234	SOLENOID KIT
4	1	251190	REPLACEMENT TRANSMITTER
5	1	*	REPLACEMENT BATTERY
6	2	416227	SCREW #10-24 X 3/4 TRUSS F/B
7	2		NUT #10-24 HEX LOCK
8	2	418140	FLAT WASHER #10 Z/P
9	1	440125	WIRE SPLICE
10	1	251235	TOGGLE SWITCH
11	2		TUBE CLAMP
12	1	440274	CABLE TIES
13	1	299724	WIRE KIT

* SONY CR2032 OR DURACELL DL2032

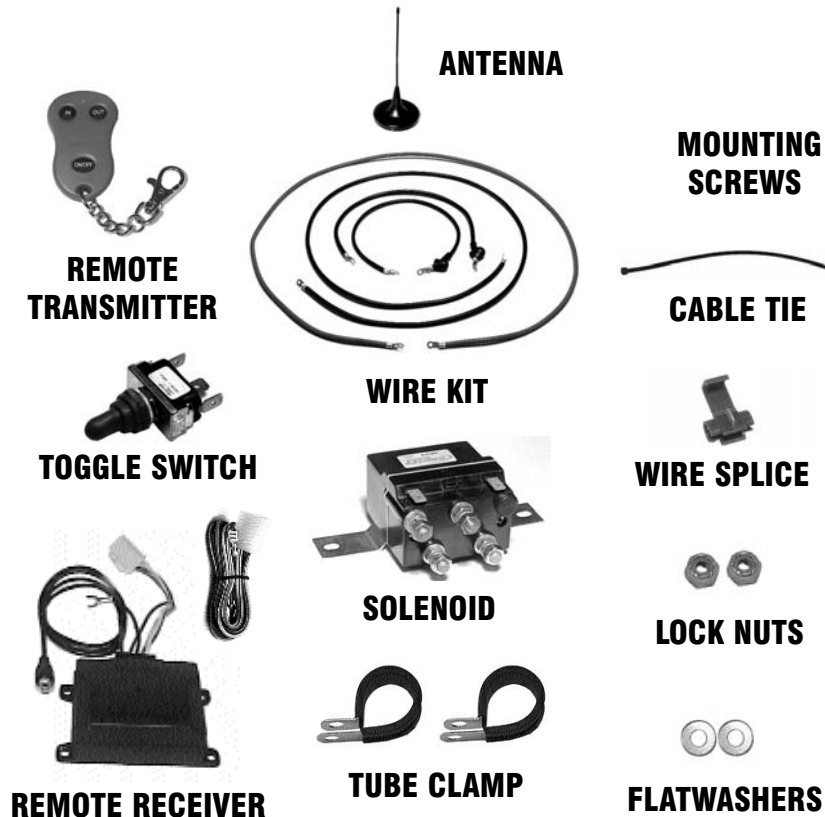

BADGER 2500 WIRELESS REMOTE TESTING

Testing/Operation

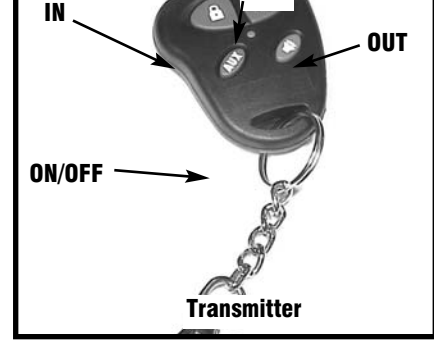1. Reconnect the positive power lead from solenoid to battery.
 2. Pull approximately 20 ft of cable off the winch by hand.
 3. Re-engage the winch clutch.
 4. Power on the receiver (with customer-supplied switch—see electrical schematic.
- 
5. Test the remote transmitter. The transmitter has push buttons labeled according to their function. To operate the winch, hold “ON/OFF” button for 2 seconds to activate the “IN” and “OUT” functions. (1 flash indicates transmitter is “on”, 2 flashes indicate transmitter is “off”).
 6. Run winch in the “OUT” direction briefly. Make sure the motor has stopped fully before reversing to prevent premature solenoid failure. Run winch in the “IN” direction briefly.
 7. Follow instructions in your winch owner’s manual for properly reeling in the rest of the cable. The transmitter is clearly labeled and a red LED flashes when the winch is in operation. To turn transmitter off, press and hold the “ON/OFF” button for 2 seconds to disable the transmitter when winch is not in use. This will prolong the battery life of the transmitter. The transmitter automatically turns off after 20 minutes.

PROGRAMMING THE RECEIVER FOR USE WITH A REPLACEMENT TRANSMITTER
 When you purchase a replacement transmitter, it will be necessary to program your receiver to accept the code for the new transmitter. To program the receiver, press and hold membrane located in the center of receiver face (area marked “push”). Press and hold “ON/OFF” button on transmitter for 3 seconds. Press and hold “OUT” button for 3 seconds or until winch activates.

CAUTION: The center membrane area of the receiver face should only be pressed when programming a new transmitter.

BADGER 2500 WIRELESS REMOTE INSTALLATION

- Place directional plate over switch and secure using knurled nut. Using wrench, tighten backup nut securely against inside of instrument cover. Make sure directional plate is installed in the same direction as the toggle switch movement.
- Place rubber boot over switch and tighten securely.

Wiring the Toggle Switch

NOTE: For clarification see wiring schematic on page 4.

- Connect red wire to center spade.
- Connect green wire to the toggle switch terminal in the "OUT" position.
- Connect the yellow wire to the toggle switch terminal in the "IN" position.


Connecting the Receiver Power Lead

- Connect the red wire w/ white stripe to the recommended customer-supplied switch using the spade connectors. See wiring schematic on page 4 for recommended switch and wiring specifications.
- Connect customer-supplied switch to red battery lead.

Installing the Antenna

- Find an appropriate location and mount magnetic antenna. Make sure magnetic base of antenna holds securely to a flat steel or iron surface.
- Carefully route antenna cable and receiver cable. Be sure to avoid sharp edges. Connect the receiver and antenna cables.
- Neatly coil excess cable and secure with cable ties. Stow the coils in a convenient location where they will not come in contact with any moving parts or sharp edges.

BADGER 2500 WIRELESS REMOTE Electrical Schematic

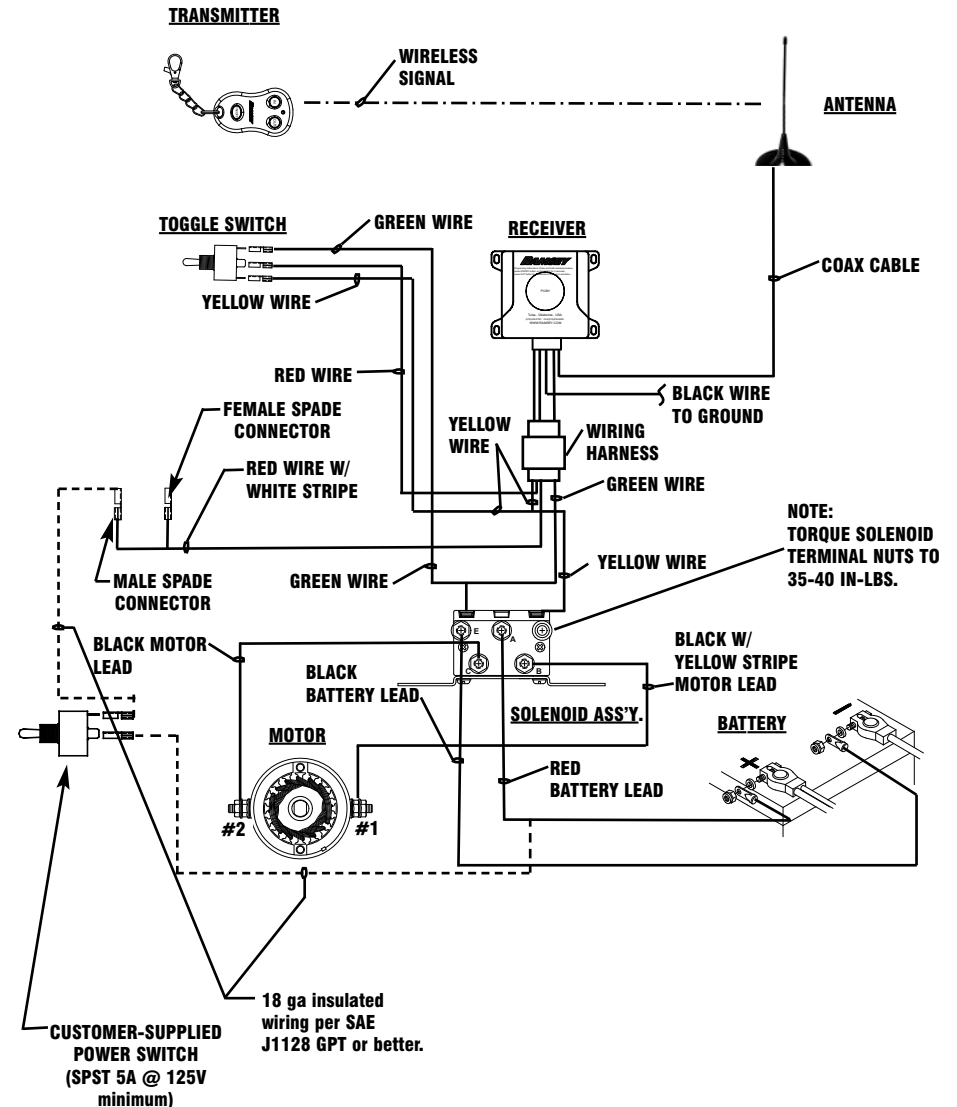

BADGER 2500 WIRELESS REMOTE INSTALLATION

Before Beginning Installation

1. Disconnect power lead from winch to battery.
2. Disengage winch clutch.
3. Remove covers as necessary for easier access to installation area.
4. Locate & mark mounting locations for receiver, toggle switch, solenoid assembly, & antenna.
5. It is recommended that a 5-amp SPST power switch be installed between the battery power and the receiver to turn off power to the receiver when not in use. Customer will need to furnish switch, then locate and mark a mounting location for it.

NOTE: Make sure locations are close enough for wiring connections to be made without making alterations to wire lengths. Antenna must be mounted on firm, flat steel or iron surface like the hood of a vehicle or frame of a trailer.

Installing the Receiver

NOTE: For clarification see wiring schematic on page 4.

1. Insert plastic tie through mounting ears on receiver and secure receiver to location determined above under "Before Beginning Installation".
2. Tighten plastic tie and clip excess.
3. Attach ground wire to frame or other grounded surface.

Caution: Do not alter the length of the ground wire as this will affect performance of the remote.

4. Attach wiring harness to receiver & route yellow and green wires to solenoid location.

Note: It is recommended that a switch be installed as shown on Electrical Schematic so that power to receiver can be turned off when not in use.

BADGER 2500 WIRELESS REMOTE INSTALLATION

Installing the Motor Leads

NOTE: For clarification see wiring schematic on page 4.

1. Connect black wire to #2 stud on motor.
2. Connect black with yellow stripe wire to #1 stud.
3. Route wires to solenoid location.

Connecting Wiring to Solenoids

1. Attach black with yellow stripe motor lead to lower right terminal stud "B" on solenoid.
2. Attach black motor lead to lower left terminal stud "C" on solenoid.
3. Attach connector with 2 yellow wires to the terminal directly above the black with yellow stripe motor lead.
4. Attach connector with 2 green wires to the terminal directly above the black motor lead.
5. Attach black battery lead to upper left terminal stud "E" on solenoid.
6. Attach red battery lead to upper right terminal stud "A" on solenoid.

Installing the Solenoid

1. Mount solenoid in location determined previously.
2. Secure using (1) tube clamp, (1) #10-24 screw, (1) flat washer, and (1) lock nut on each side of solenoid assembly.

CAUTION: Be sure that no wire connections are in contact with either the frame/grounded surface or with each other as a direct short will occur.

Installing the Toggle Switch

1. Route red, yellow, and green wires to toggle switch location .
2. Drill 1/2" hole in location for toggle switch installation.
3. Insert switch through hole drilled in previous step.