
Deweze CLUTCH PUMP KIT FORD 6.7L, Dual Alt., 2012+, A Pump

KIT NUMBER 700611

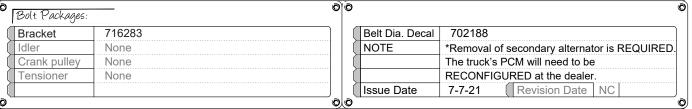

Item	Part No.	Description			
1.	716282	Pump mount bracket	10.	*	Pump, side port
2.	716040	Strator Bushing	11.	742009	Clutch
3.	716041	Stator Offset Clip	12.	740151	Idler Assy, 3" Flat X 1.285
4.	110141	M8-1.25 Wiz Flng Nut, Gr 8.8, Zinc	13.	OEM	Bolt
5.	110270	M8-1.25 X 130, Hhcs Bolt 10.9 Zinc	14.	OEM	Stator
6.	110927	M8-1.25 X 120 Shcs Bolt	15.	110703	Washer, M8 Flat, Zinc
7.	110928	M8-1.25 X 140 Hhcs Bolt	16.	110437	3/8-16X3/4 Flange head bolt
8.	110929	M8-1.25 X 20 Wiz Flng Bolt	17.	711663	Idler Bushing
9.	110930	M8-1.25 X 25 Button Hd Bolt	18.	110989	M10-1.5 X 50 Flange Bolt
			19.		Orignal Belt Re-used (Gates #DK081403

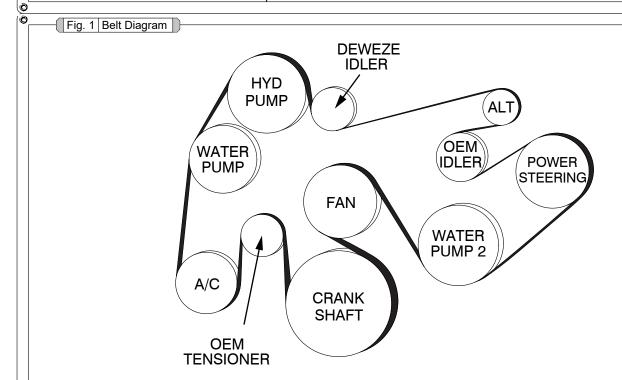


Fig. 2 Remove Air Box



Fig. 4 Mounting Locations




DewEze

(O)

EZE CLUTCH PUMP KIT

KIT NUMBER FORD 6.7L
700611

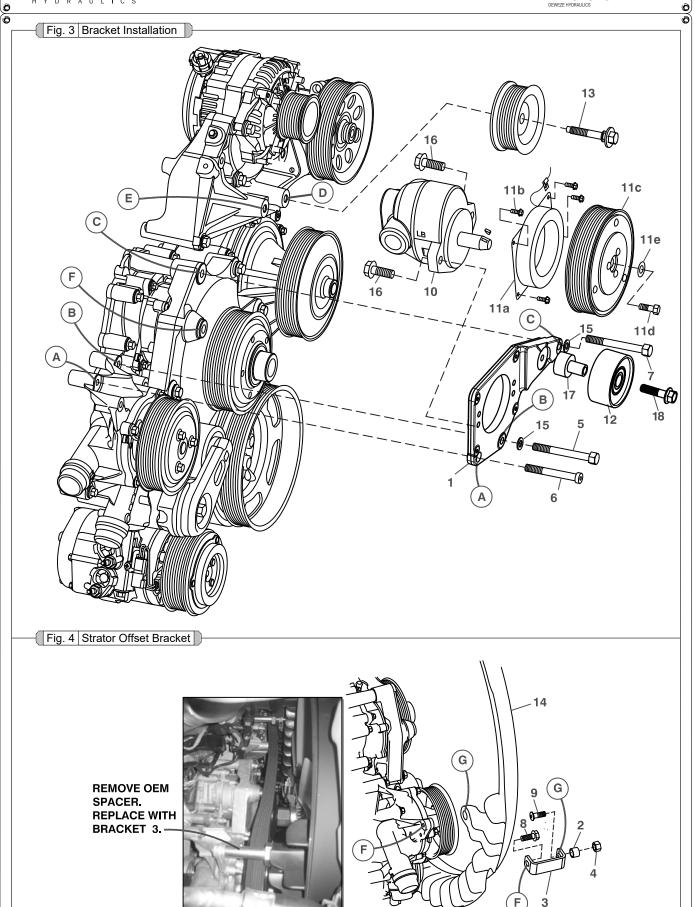

DEWEZE CLUTCH PUMP KIT 700611

FORD 6.7L, Dual Alt., 2012+, A Pump

INSTALLATION INSTRUCTIONS

The installation of this kit requires trained decision-making concerning clearances, tying components together, rerouting, or relocating OEM components, etc. It is impossible to describe all of the clearance and vibration points, etc. in the installation instructions. Therefore, the technician must exercise professional judgment to achieve the best quality installation.

NOTE: The installation of this kit REQUIRES the romoval of the secondary alternator from the truck. The clutch pump kit is designed to mount in the secondary mounting location. The truck PCM will have to be re-configured for use with single alternator. See your dealer for these procedures. Refer to Ford service bulletin Q160R2 dated 2/17/17 adn Q-266 dated 2/20/17. The latest release of service updates can be found on the Ford bodybuilder website at: www.fleet.ford.com/truckbbas/topics/hotinfo.html

- 1. Disconnect the battery.
- 2. Open all clips to the air cleaner lid and loosen clamp on the air inlet of the engine. Remove the entire air intake tube and air cleaner lid as an assembly.
- 3. Remove the OEM belt from the truck. Remove the secondary alternator. Remove OEM idler pulleys from the truck at locations (E) and (F). **NOTE:** The bolt will remain in the pulley. Reinstall the ider at location (D).
- 4. Remove bolts at locations (A,B, and C). Remove the stator bushing shown in Fig. 4. There is a 13 mm nut on the front side fo the stator tab. To remove the OEM spacer it will be helpful to also remove the nut on the stator spacer on the upper driver side fo engine to allow the stator to move foward slightly.
- 5. Insert stator bushing (2) into large hole in rear of stator at location (G). Insert the stator offset clip (3) between points (F and G). Thread bolt (8) through rear hole of clip (3) into engine at location (F). Insert bolt (9) into front hole of clip (3), through stator with bushing (2), and thread nut (4) onto bolt (9).

- 6. Install fittings into pump (10). Bolt pump onto pump place (1) with two bolts (16) and two washers (17). Make sure the suction fitting on the inside is pointing towards the front fo the truck to just clear the pump bracket. **Do not mount clutch at this time.**
- 7. Install bracket (1) with pump onto the truck using bolt (6) at location (A), bolt (5) at location (B), and bolt (7) at location (C) as shown in Fig. 3.
- 8. Install the new bushing (17), idler (12), and bolt (18) onto the bracket as shown in Fig. 3.
- 9. Attach coil (11a) with four bolts (11b) supplied with clutch. Attach clutch pulley (11c) to pump shaft with bolt (11d) and heavy washer (11e) supplied with clutch.
- 10. Install the OEM belt back onto the truck with the new routing shown in Fig. 1.
- 11. Make all hose connections to the pump.
- 12. Reinstall the intake air tube and air cleaner lid as removed.
- 13. Reconnect the battery.
- 14. Run the engine and check for any clearance or alignment problems. Adjust as needed.

STARTUP INSTRUCTIONS

After the installation of the kit, startup of a hydraulic system requires that the hydraulic pump be started following professional fluid power standards. Our testing shows that running a pump for as little as 30 seconds without oil can cause damage that shortens the life of the pump. Therefore, the pump with a non-flooded inlet must be primed; air bled out of the system, so oil reaches the pump immediately. Cycle the clutch at low load, 10-15 times to break in surfaces. This should be done at a rate of 3 cycles per minutes.