

Hinged Flange Mount Bracket

Installation Instructions


Item # EZC-FMBH | The **EZ Claw Hinged Flange Mount Bracket** features a reinforced hinge assembly that pivots 45 degrees in either direction to provide additional hose travel.

Kit Includes:

- (1) Hinged Flange Mount Bracket
- (1) 5/16" Hardware Kit

Recommended Tools for Installation:

- (1) Battery Powered Drill
- (1) 1/4" Drill Bit
- (1) 17/32" Drill Bit
- (1) Rivet Nut Tool (EZCRNIT)
- (1) 1/2" Socket
- (1) 9/16" Socket
- (1) 9/16" Open Ended Wrench
- (1) Permanent Marker or Center Punch

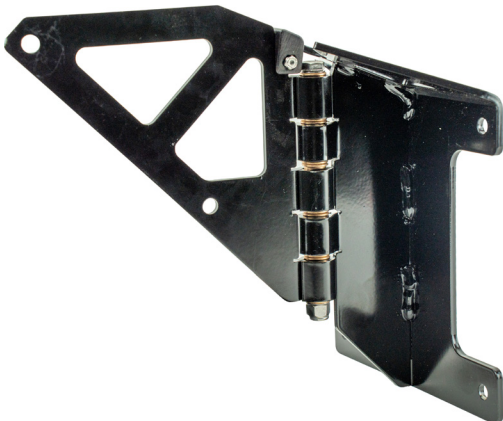

Installation Instructions



Locate Cab Structure.

Select a mounting location on the driver side a minimum of 5-1/2' above the catwalk.



Mark Hole Locations.

It may be necessary to drill out one rivet and use as a mounting hole to ensure the bracket is flush. Hold the bracket level in the selected position and mark all four mounting holes.



Drill Pilot Holes.

Using a 1/4" bit, carefully drill pilot holes in the center of each mark (being careful not to plunge into insulation, wires, etc). Drill out the pilot holes using a 17/32" drill bit.



Install Rivet Nuts.

Install four rivet nuts using a Rivet Nut Tool (EZCRNIT).



Mount Bracket.

Mount the EZ Claw bracket using 5/16" bolts (included).



Install Line Saver.

Mount the EZ Claw Line Saver utilizing the 3/8" mounting hardware supplied with the Line Saver.



Attach Hose Assembly.

Using an EZ Claw Sling (EZCS) or Hose & Cable Block (EZCHCH38), attach the EZ Claw Line Saver cable to the hose assembly.