

GAS/OIL POCKET MOUNT P/N 1041 INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products P/N 7000, P/N 7020, P/N 7040,
- P/N 7050 with the included Trac Lok inserts P/N 7016, torque the screws to a maximum 15 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.



MTG. HARDWARE for PAC TRAC	QTY
#10-24 x 3/4 S.S. S.S. Pan Head Screw	2
P/N 7016 Trac Lok Insert	2
STANDARD MTG. HARDWARE	QTY
P/N 2035	
P/N 2035 4-20 x 1 S.S. 9/N 3017 S.S. Pan Head Screw	2

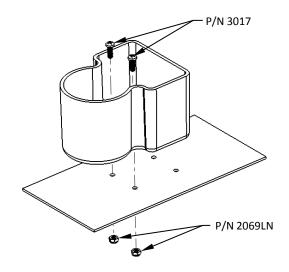


FIGURE 1 (Thru Mounting Method)

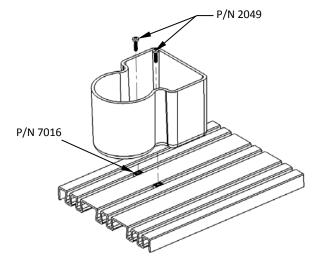


FIGURE 2 (PAC TRAC Mounting)