

Installation Guide: 700 Series to M7 Series Flange Adapter Model M7FC700

51 Winthrop Road.

Chester, Connecticut 06412-0684

Phone: (860) 526-9504

Internet: www.whelen.com

Sales e-mail: autosale@whelen.com

Customer Service e-mail: custserv@whelen.com

Mounting:


1. Remove the existing 700 series lighthead and gasket from the mounting surface.

2. Mark the M7 flange mounting hole locations onto the mounting surface by using the flange as a **Round Hole** template or using the measurements Grommets shown. 3. Drill four 1/4 inch mounting holes and insert the four supplied #8 round hole grommets. Mounting

4. Insert the two #8 square grommets into the flange and secure the lighthead to the flange with two #8 X 1" sheet metal screws.

NOTE: Due to the mounting hole locations for the M Series and the variety of lighthead styles which may be replaced, cutting or drilling may be required for the screws going into the square grommets.

- Secure the Flange and lighthead to the vehicle with the 4 supplied #8 X 1" sheet metal screws and round grommets you installed in step 3.
- 6. Extend the wires to your power source and connect as shown in the lighthead manual.

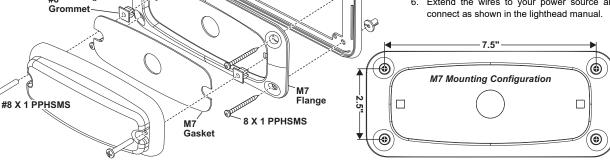

©2009 Whelen Engineering Company Inc. Form No.14337 (080409)

For warranty information regarding this product, visit www.whelen.com/warranty

ENGINEERING COMPANY INC.

Installation Guide: 700 Series to M7 Series Flange Adapter Model M7FC700

51 Winthrop Road.

Chester, Connecticut 06412-0684

Phone: (860) 526-9504


Internet: www.whelen.com

Sales e-mail: autosale@whelen.com


Customer Service e-mail: custserv@whelen.com

Mounting:

1. Remove the existing 700 series lighthead and gasket from the mounting surface.

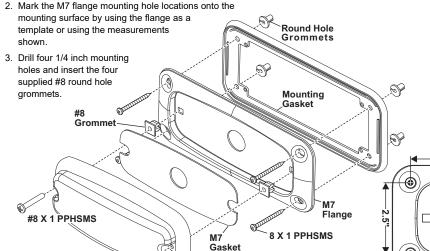

- 4. Insert the two #8 square grommets into the flange and secure the lighthead to the flange with two #8 X 1" sheet metal screws.
 - NOTE: Due to the mounting hole locations for the M Series and the variety of lighthead styles which may be replaced, cutting or drilling may be required for the screws going into the square grommets.
- Secure the Flange and lighthead to the vehicle with the 4 supplied #8 X 1" sheet metal screws and round grommets you installed in step 3.
- Extend the wires to your power source and connect as shown in the lighthead manual.

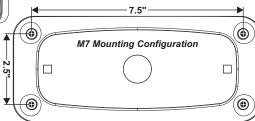

©2009 Whelen Engineering Company Inc. Form No.14337 (080409)

For warranty information regarding this product, visit www.whelen.com/warranty