


WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Customer Service e-mail: custserv@whelen.com

⚠ WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

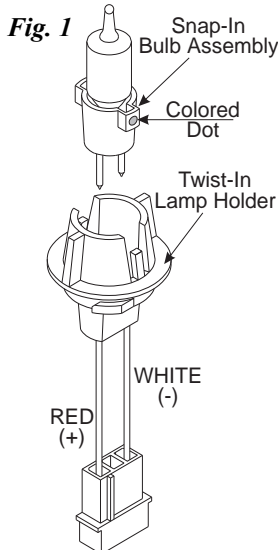


CAUTION! Replacing any halogen bulb requires the use of safety glasses to prevent injury.
CAUTION! Do not handle the bulb with bare hands. Use gloves to prevent possible injury.



NOTE: The replacement lamp holder you have received allows for faster, easier lamp replacement, in the event of a failure. This new lamp holder is installed in the same manner as your previous lamp holder. The new lamp wires connect exactly as before. Bulb replacement, however, is performed differently and this procedure is explained below.

To replace a Snap-In bulb....

1. Be sure the power to the lamp is turned off.
2. Insert a small, flat-blade screwdriver into the space between the twist-in lamp holder and the snap-in bulb assembly.
3. Gently rotate the screwdriver as shown in Fig. 2. Repeat this action until the bulb is loose.
4. Pull the bulb in an upward direction until it is free.
5. Verify that the replacement bulb is the correct wattage by the colored dot on the bulb assembly (see "Part Numbers"). Insert the alignment tab of the new bulb into the lamp holder and press downwards to lock the new bulb into place.

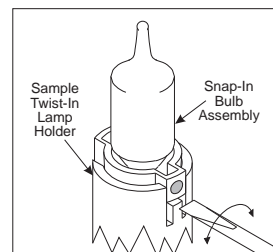

Part Numbers

Twist-In Lamp Holder (no bulb)	SNADAPT
Snap-In Bulb Assembly (50 Watt/Blue Dot)	H50SN12

©1996 Whelen Engineering Company.
Form No.13129 (053196)

For warranty information regarding this product, visit www.whelen.com/warranty


WHELEN[®]

ENGINEERING COMPANY INC.


51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Customer Service e-mail: custserv@whelen.com

⚠ WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

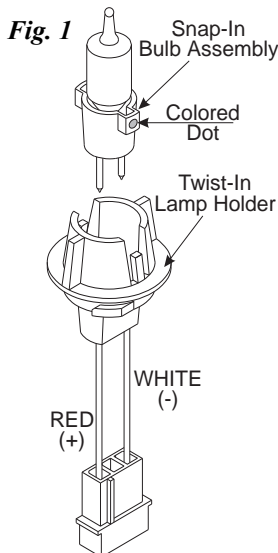


CAUTION! Replacing any halogen bulb requires the use of safety glasses to prevent injury.
CAUTION! Do not handle the bulb with bare hands. Use gloves to prevent possible injury.

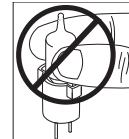

NOTE: The replacement lamp holder you have received allows for faster, easier lamp replacement, in the event of a failure. This new lamp holder is installed in the same manner as your previous lamp holder. The new lamp wires connect exactly as before. Bulb replacement, however, is performed differently and this procedure is explained below.

To replace a Snap-In bulb....

1. Be sure the power to the lamp is turned off.
2. Insert a small, flat-blade screwdriver into the space between the twist-in lamp holder and the snap-in bulb assembly.
3. Gently rotate the screwdriver as shown in Fig. 2. Repeat this action until the bulb is loose.
4. Pull the bulb in an upward direction until it is free.
5. Verify that the replacement bulb is the correct wattage by the colored dot on the bulb assembly (see "Part Numbers"). Insert the alignment tab of the new bulb into the lamp holder and press downwards to lock the new bulb into place.

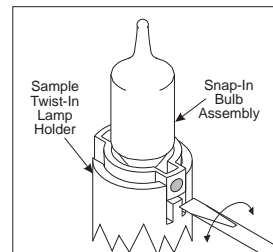

Part Numbers

Twist-In Lamp Holder (no bulb)	SNADAPT
Snap-In Bulb Assembly (50 Watt/Blue Dot)	H50SN12

©1996 Whelen Engineering Company.
Form No.13129 (053196)

For warranty information regarding this product, visit www.whelen.com/warranty