

# Extendable Cable Tieback Kit

## Installation Instructions

Item # Ezc10062 & Ezc10063


The **EZ Claw Extendable Cable Tieback Kit** comes pre-assembled and installs with existing holes in the auxiliary boom winch mounts on a Miller rotator.

**Ezc10062 Includes:**

- (1) 80 lb. Line Saver
- (1) Cable Loop
- (2) 2-3/8" bolts

**Ezc10063 Includes:**

- (2) 80 lb. Line Savers
- (2) Cable Loops
- (4) 2-3/8" bolts

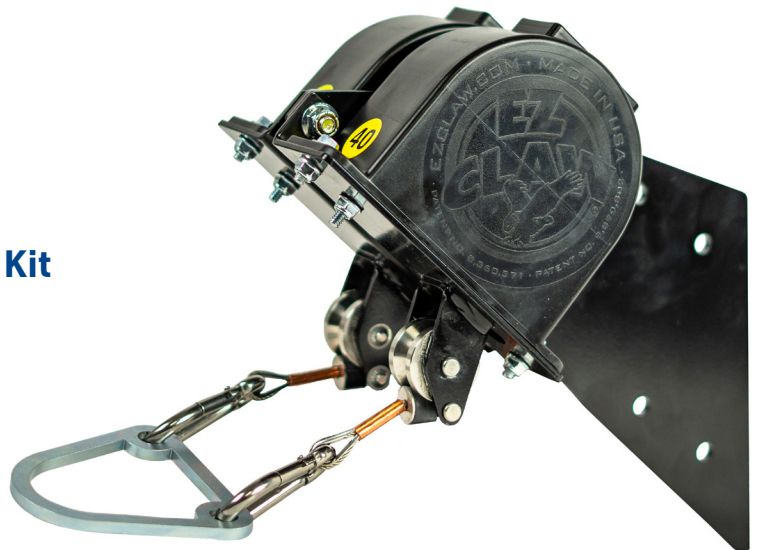

# Installation Instructions

1



## Remove factory tieback.

If applicable, remove the spring cable tieback that is provided by Miller Industries.

2



## Locate mounting holes.

Use that hole and the hole above to install with 2-3/8" bolts.


3



## Orientate brackets.

Bolt the assembly to the winch mount with the cable loops of the tensioner facing downward.


4

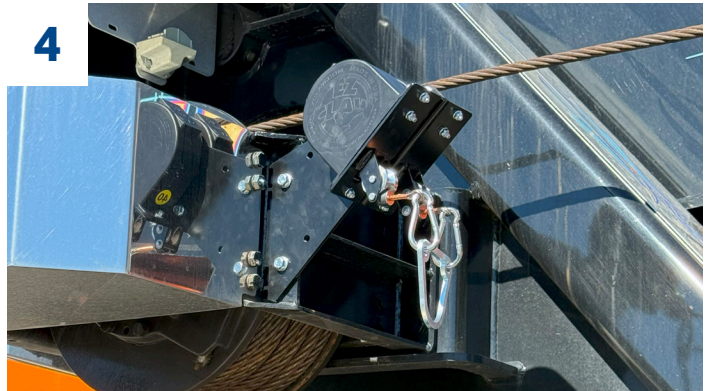

## Attach links.

Connect the two carabiners to the small holes on the EZ Claw Line Saver. Then attach the extended cable tieback link to the two carabiners as shown above.

5

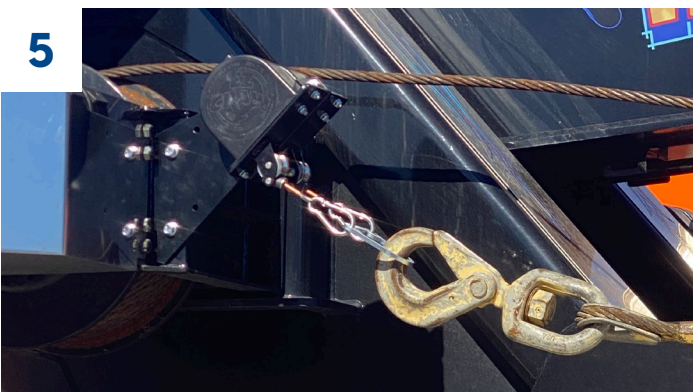

## Connect hook.

Attach the cable tieback loop to the auxiliary winch hook.

## Note:

If applicable, repeat the steps on the other side with an additional kit.